



# Paslode battery charger solid red light

Why is my Paslode battery not charging?

In some cases, the Paslode's battery won't charge if the battery itself is damaged or has maximized its cycle life. If the battery is damaged, the red indicator light on charger does not flash when you try to charge the battery. If the battery isn't accepting a charge when you mount it on the charger, you must replace it.

What happens if a battery is damaged on a Paslode?

If the battery is damaged, the red indicator light on charger does not flash when you try to charge the battery. If the battery isn't accepting a charge when you mount it on the charger, you must replace it. A new battery doesn't come fully charged, so charge it before inserting it into the Paslode.

How to troubleshoot a Paslode nail gun battery charger?

Allow the charger to complete its check, and it should transition to a solid green light once done. Test the charger with an alternate power source to rule out any issues with the electrical outlet. In conclusion, understanding the Paslode nail gun battery charger's indicator lights is crucial for effective troubleshooting.

Is the battery charger safe for the Paslode Cordless Nailer?

The battery charger system meets all safety requirements for power tools. This manual is intended to acquaint you with the Paslode Cordless 16 ga. Straight Lithium-ion Finish Nailer. Unlike other power fastening tools, the Cordless Finish Nailer is powered by an internal combustion linear motor.

What is a Paslode cordless fuel cartridge?

Paslode Cordless technology is powered by an internal combustion engine and are affected by altitude. The tool may lose power or become erratic at elevations of 6000 feet or greater. NOTE: NOTE: Paslode Cordless fuel cartridges are marked with a "Best Use Before" date on the bottom of the can.

Why does my Paslode angled finish Nailer battery stop charging?

Exposing the battery to excessively high temperatures of 120 degrees Fahrenheit and above can cause the battery to burst. A Paslode Cordless Angled Finish Nailer battery usually stops charging if the charger is experiencing technical difficulty or if the battery is faulty or dead.

If that's all clear, it could be the battery that is at fault. 3) It is easy to test the battery itself in the charger base that comes with your tool. Look at the lights on the charger unit - an alternating flashing red and green light means that the ...



# Paslode battery charger solid red light



# Paslode battery charger solid red light

Contact us for free full report

Web: <https://solarcomplete.co.za/contact-us/>

Email: [energystorage2000@gmail.com](mailto:energystorage2000@gmail.com)

WhatsApp: 8613816583346

